

DVD/VCR Classroom Instructions – Old Main 383

Instructions available online at www.baylor.edu/astc/instructions



Old Main 383 (French Lounge) has a wall mounted GE television and a Sony SLV-D380P Combo DVD/VCR Player.

This television will play

- North American DVDs, MP3 and JPEG Disks,
- VHS tapes, and
- Cable TV.

The Sony REMOTE CONTROL is necessary for the proper operation of this room and is STORED on a VELCRO strip on top of the DVD player.

The REMOTE uses 2 AAA batteries available in the Department Office.

To access the complete operating manual for this DVD/VCR, visit <http://tinyurl.com/4rm3fa>

To View Cable TV	Turn the TV ON and leave the DVD/VCR OFF. Tune the channels as desired.
To View DVDs	Turn the TV ON and tune to channel three (3). Turn the DVD/VCR player ON. Using the front panel buttons or the remote, PRESS EJECT and WAIT for the drawer to open (up to 15 seconds). Insert DISK and PRESS PLAY. If the remote fails to work, SLIDE the SELECT button to DVD -or- check the batteries.
To View VHS Tapes	Turn the TV ON and tune to channel three (3). Turn the DVD/VCR player ON. Insert VHS tape and OBSERVE; some tapes PLAY automatically, others, PRESS PLAY. Notice the SELECT buttons on the REMOTE. Press VIDEO to control the VCR.



Be sure to use the Sony Remote with the switch pushed to (DVD / Video).

Remote instructions continue on the back.

**Please,
RETURN the REMOTE
to the VELCRO STRIP.**




To access the complete operating manual for this DVD/VCR, surf to <http://tinyurl.com/4rm3fa>

Using the Sony SLV-D380P DVD/VCR Combo Player w/ Remote Control

Most MFL televisions are set up to play from the DVD/VCR combo unit automatically. Those televisions with CABLE will need to be tuned to channel three (3) to view the DVD or VHS tape program.

Playing discs **DVDVideo**

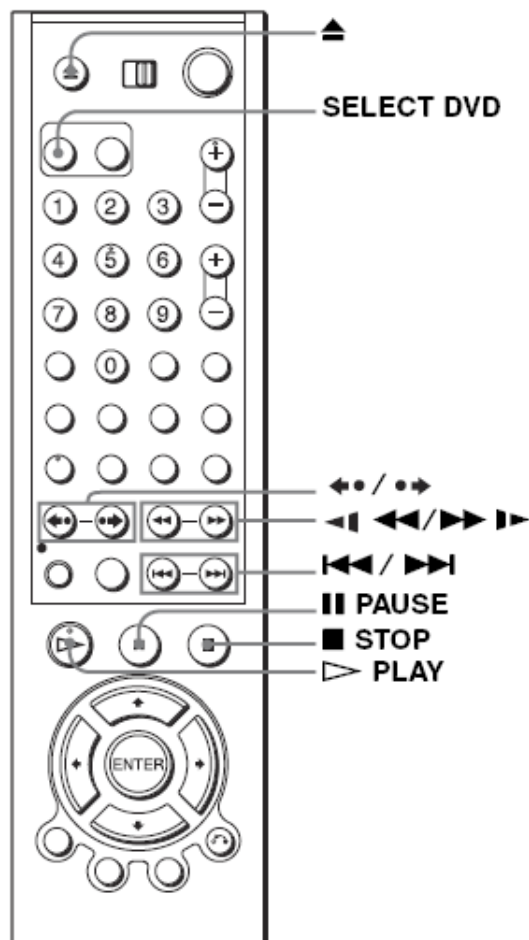


Insert the DVD with label up. Push the Open/Close button to load. Press PLAY on the unit or on the Remote.




**with the playback
side facing down**

Playing a tape **VHS**

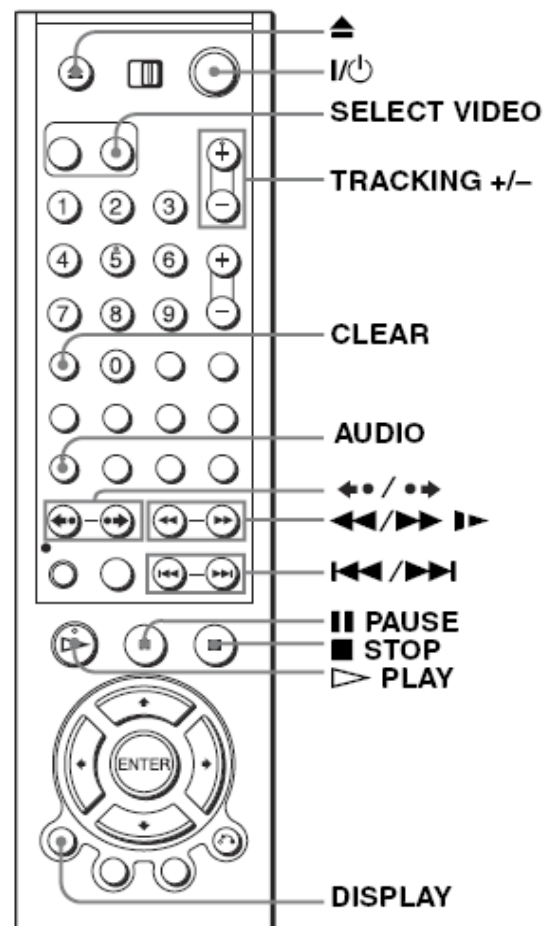

Insert the VHS tape and press PLAY. Tapes with the safety tab removed will begin to play automatically. Use the remote to pause, fast forward, rewind, etc.

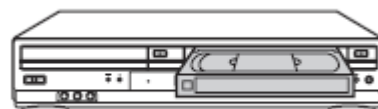

For immediate assistance or to report a problem, call/text 254-307-1614 (Classroom Technology Services).
For other questions, suggestions, or training, email ASTC@baylor.edu (Arts & Sciences Technology Center).